
FILTER ASSEMBLY/REPLACEMENT

▲ WARNING: For your own safety, never connect plug to power source outlet until all assembly steps are complete and you have read and understood the safety and operation instructions. Do not operate Vacuum with any parts damaged or missing.

To Remove Power Head:

1. Grasp the tank latches on both the right and left side of the power head. Slowly pull the tank latches away from the tank. Lift the power head off the tank. Place the power head of the Vacuum upside down (*Figure C*).

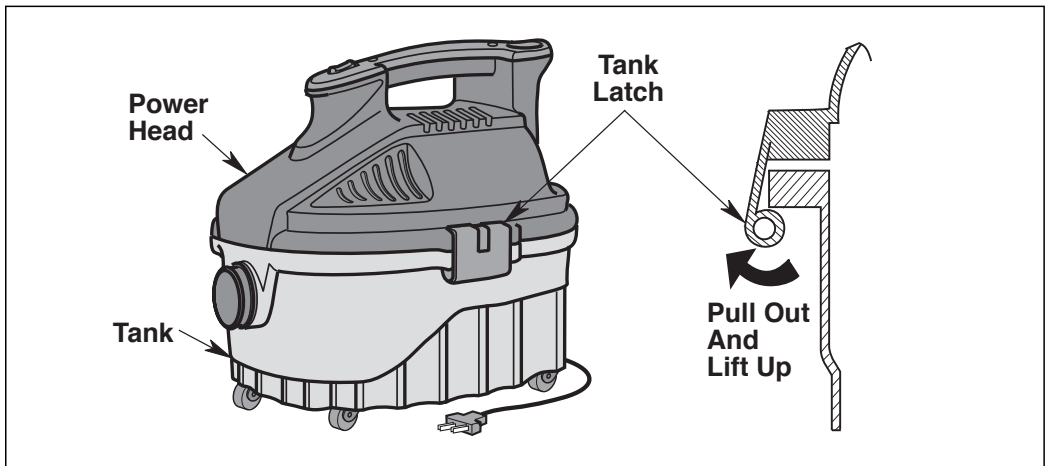


Figure C

FILTER ASSEMBLY/REPLACEMENT (cont.)

▲ WARNING: Do not operate without filter cage and float, as they prevent liquid from entering the impeller and damaging the motor.

IMPORTANT: To avoid damage to the blower wheel, always reinstall the filter before using the Vacuum for dry material pick-up.

Removal and Installation of Qwik Lock™ Fine Dust Cartridge Filter

Filter Removal:

1. Hold the filter tabs of the Qwik Lock filter in each hand (*Figure D*).
2. With one thumb on the Qwik Lock stud, which protrudes through the integrated filter plate, lift up on the filter tabs while pushing down on the stud.
3. This action will cause the filter to release from the filter cage. Slide filter off cage.

Filter Installation:

1. Carefully slide the Qwik Lock filter over the filter cage and press down on the outside edge of the filter until the rubber gasket on the bottom of the filter seats securely around the base of the filter cage and against the lid.
2. Align the small center hole in the top of the filter over the Qwik Lock™ stud on the filter cage. Press firmly on top of the filter near the stud to allow the filter to snap over the ball on the end of the stud. The filter is now attached.

NOTE: Failure to properly seat the bottom gasket could result in debris bypassing the filter.

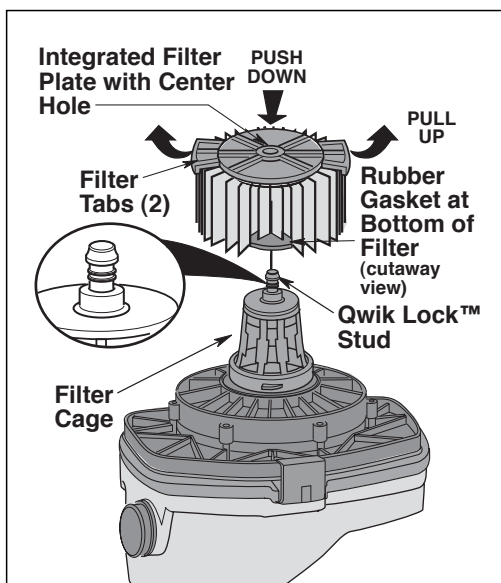


Figure D